

⚠ PLEASE READ AND FOLLOW ALL WARNINGS ⚠



Read Operating Instructions

Always become familiar with all the instructions and warnings before operating any power tool.

Always Wear Approved Eye Protection

Impact resistant eye protection should meet or exceed the standards as set forth in the United States ANSI Z87.1, Occupational and Educational Eye and Face Protection. Look for the marking Z87.1 on your eye protection to insure that it is an approved style. For further information, ANSI Z87.1, Occupational and Educational Eye and Face Protection, is available from the American National Standards Institute, Inc., 11 West 42nd Street, New York, NY 10036.



Hearing Protection is Recommended

Hearing protection should be used when the noise level exposure equals or exceeds an 8 hour time-weighted average sound level of 85 dBA. Process noise, reflective surfaces, other tools being operated nearby, all add to the noise level present in your work area. If you are unable to determine your noise level exposure, we recommend the use of hearing protection.



Avoid Prolonged Exposure to Vibration

Tools can vibrate during use. Prolonged exposure to vibration or very repetitive hand and arm movements, can cause injury. Stop using any tool if discomfort, tingling feeling or pain occurs. You should consult your physician before resuming use of the tool.

90 PSIG Maximum

This tool is designed to operate at




an air pressure of 90 pounds per square inch gauge pressure (90 PSIG) maximum, at the tool. Use of higher air pressure can, and may cause injury. Also, the use of higher air pressure places the internal components under loads and stresses they were not designed for, causing premature failure. The air supply should be clean and dry, preferably lubricated. For best results, drain the moisture from your compressor daily.

WARNING:

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to cause cancer, birth defects or reproductive harm. Some examples of these chemicals are:

- Lead from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium from chemically treated lumber

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area and work with approved safety equipment such as those dust masks that are specially designed to filter out microscopic particles.

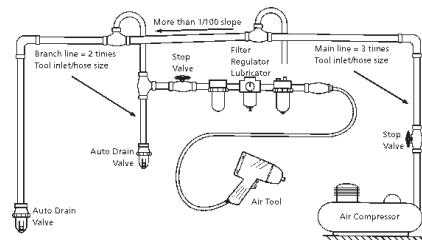

Universal Tool

UT2010

1/2" Ratchet Wrench

PL0276

Description

Universal Tool UT2010 is designed for quick rundown or removal of threaded fasteners in production, assembly and automotive repair.



devices as furnished by the manufacturer. Where an air tool is modified or altered, the modifier shall provide the safeguards to enable it to be safely used in the operations intended and to comply with any applicable provisions as contained in ANSI B186.1.

Tool Installation

Pressure regulators shall be used to limit air pressure to the rated pressure where the supply pressure exceeds the tool's rated pressure. Air hoses and lines shall be relieved of compressed air before being disconnected or disjointed, unless there is automatic valve closing protection at the joint being separated. Synthetic lubricants which can cause deterioration of elastomer seals shall not be used in air systems of air tools.

American National Standards Institute, Inc.
11 West 42nd Street
New York, NY 10036.

The use of the word "shall" in the following instructions, indicates that adherence to the particular requirement is necessary to conform to ANSI B186.1.

Tool Application and Usage

Portable tools shall be used only for the purposes intended in their design and within the capacity for which they were intended and rated. It shall be the tool owner's and/or employer's responsibility to instruct each operator in the safe use of the tool. Tools shall not be used without guards and safety

regulators shall be used to limit air pressure to the rated pressure where the supply pressure exceeds the tool's rated pressure. Air hoses and lines shall be relieved of compressed air before being disconnected or disjointed, unless there is automatic valve closing protection at the joint being separated. Synthetic lubricants which can cause deterioration of elastomer seals shall not be used in air systems of air tools.

Tool Maintenance

It shall be the tool owner's and/or employer's responsibility to assure that tools are maintained in a safe operating condition. Tool maintenance and repair shall be performed by authorized, trained, competent personnel. Tools shall be disconnected from their compressed air supply before repairs are attempted. Repairs shall be consistent with the manufacturer's recommended procedures. Tool, hoses and fittings shall be replaced if unsuitable for safe operation. It shall be the tool owner's and/or employer's responsibility to keep required rating markings and warnings on the tool in legible condition.

Read these instructions carefully before attempting to install, operate or service this Florida Pneumatic product. Failure to comply with the instructions could result in personal injury and/or property damage!
Retain these instructions for future reference.

FPMC


Specifications

Free Speed RPM.....	175
Drive.....	1/2-in.
Working Torque.....	75ft.-lbs.
Length.....	14-1/8-in.
Weight.....	4.4 lbs.
Air Inlet.....	1/4-in.
Recommended Hose Size.....	3/8-in.
Average Air Consumption.....	5 CFM
Maximum operating pressure.....	90 PSI
Diameter.....	1-1/2-in.

Parts Breakdown for UT2010

USE ONLY POWER SOCKETS & ACCESSORIES

Sockets and accessories used shall be of the power socket type. Always check sockets, retainers and drives regularly for wear or damage and replace whenever necessary

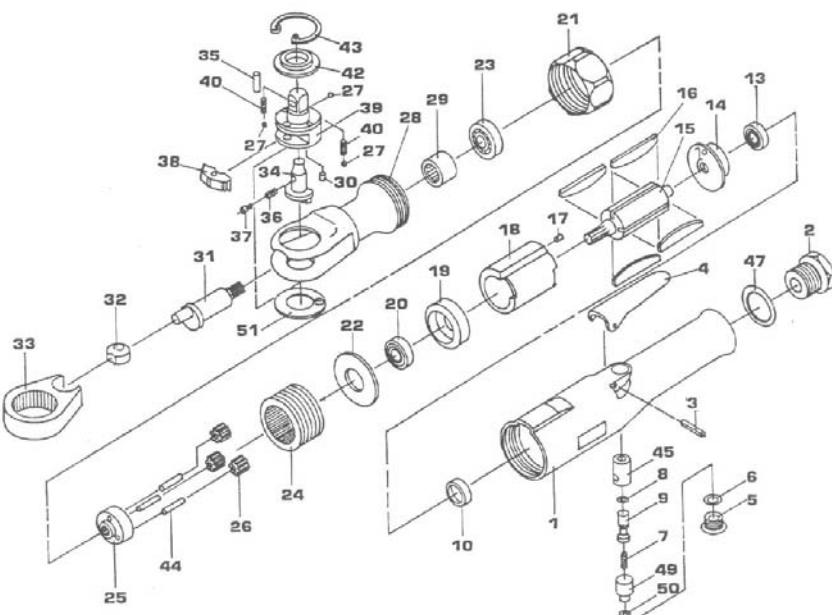

Ref.	Description	Model No.	Qty.
1	Motor Housing	9HD-12001	1
2	Inlet Bushing	9HD-12002	1
3	Spring Pin	9SP-25220	1
4	Throttle Lever	9AR-38005	1
5	Valve Screw	9VP-70041	1
6	O-Ring	9ORP-0110	1
7	Valve Spring	9VP-70037	1
8	O-Ring	9ORP-0060	1
9	Valve Stem	9VP-70035	1
10	Bearing Cap	9VP-70011	1
13	Ball Bearing	9BB-06082	1
14	Rear End Plate	9HD-12014	1
15	Rotor	9HD-12015	1
16	Rotor Blade	9HD-12016	4
17	Spring pin	9SP-30060	1
18	Cylinder	9HD-12018	1
19	Front End Plate	9HD-12019	1
20	Ball Bearing	9BB-60002	1
21	Clamp Nut	9HD-12021	1
22	Washer	9HD-12022	1
23	Ball Bearing	9BB-62000	1
24	Internal Gear	9HD-12024	1
25	Idler Gear Plate	9HD-12025	1

Ref.	Description	Model No.	Qty.
26	Idler Gear	9HD-12026	3
27	Steel Ball	9SB-006	3
28	Ratchet Housing	9HD-12028	1
29	Needle Bearing	9HD-12029	1
30	Spring Pin	9SP-25060	1
31	Crank Shaft	9HD-12031	1
32	Drive Bushing	9HD-12032	1
33	Ratchet Yoke	9HD-12033	1
34	Reverse Button	9HD-12034	1
35	Needle Roller	9NR-60160	1
36	Reverse Spring	9HD-12036	1
37	Lock Pin	9HD-12037	1
38	Pawl	9HD-12038	1
39	Ratchet Anvil	9HD-12039	1
40	Spring	9HD-12040	2
42	Thrust Washer	9HD-12042	1
43	Internal Stop Ring	9RTW-036	1
44	Needle Roller	9NR-50223	3
45	Bushing	9AP-70030	1
47	O-Ring	9ORP-0180	1
49	Air Regulator	9AP-70034	1
50	O-Ring	9ORP-0080	1
51	Washer	9HD-12051	1

Limited Warranty

Universal Tool warrants its tools to be free from defects in material and workmanship for one year from the date of purchase. This warranty does not apply to tools which have been abused, misused, modified or repaired by someone other than Universal Tool or its authorized service centers. If a Universal Tool proves defective in material or workmanship within one year after purchase, return it to any authorized service center or to Universal Tool, freight prepaid. Please enclose your name, address and adequate proof of purchase date with a brief description of the defect. Universal Tool will, at its option, repair or replace defective tools, free of charge. Repairs or replacements are warranted as described above for the remainder of the warranty period. Universal Tool's sole liability and your exclusive remedy under this warranty is limited to repair or replacement of the defective tool. There are no other warranties expressed or implied and Universal Tool shall not be liable for incidental, consequential or special damages, or any other damages, costs or expense of repair or replacement as described above.